



# funtronic

*Instalation manual for the Funtronic Floor*  
*Manual de instalación*

## 1) WHAT IS NEEDED FOR THE INSTALLATION?

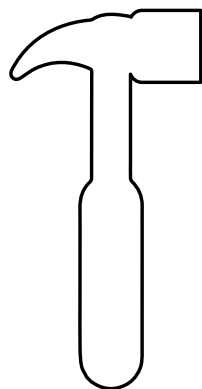

 *Hammer*



*Phillips type screw drive*




*Pencil*


*Drill bit, 10 mm diameter*




*Wiertarka  
Drill*

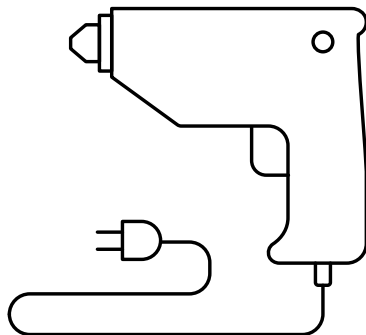


## 2) PARTS OF THE SET

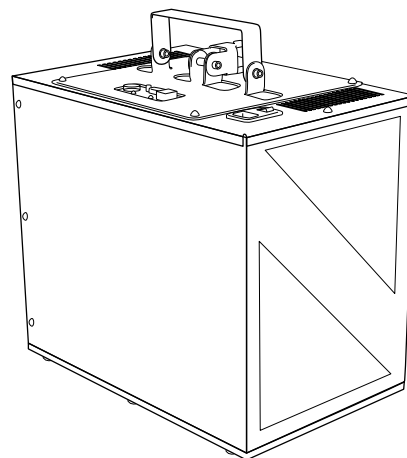


*The Funtronic Floor*

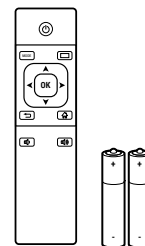


*Remote with batteries*

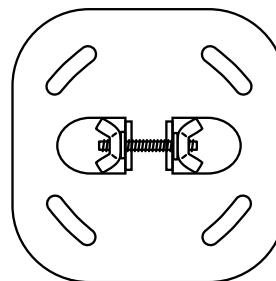

*Hanger with wing nuts*

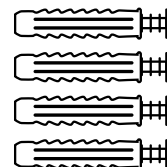


*4 rawlplugs with screws*

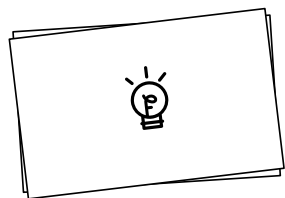


*Manual*




*Extension\**

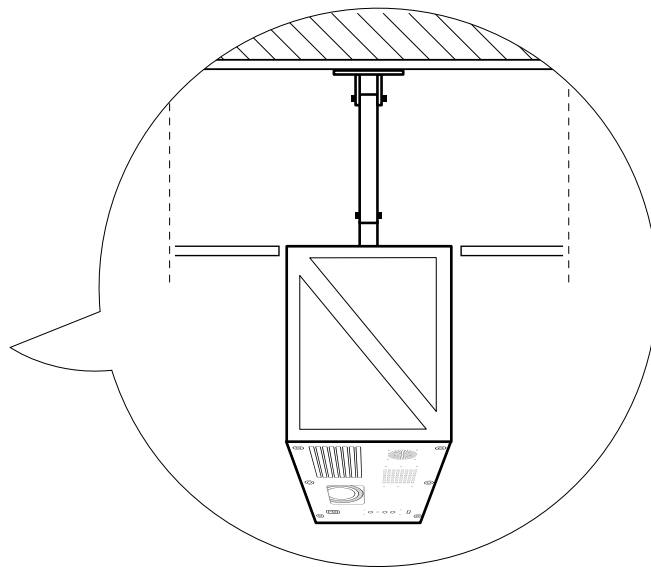

*\*) use the extension if you are installing the hanger to a hidden ceiling (p. ex. suspended ceiling)*

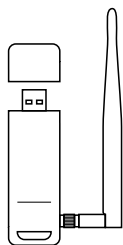

*USB network adapter*

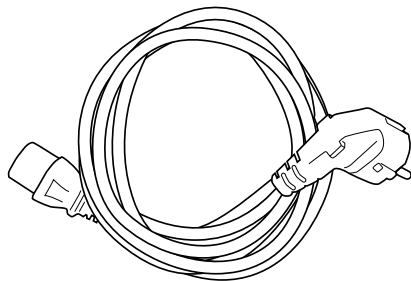

*Power cable*


3) CHOOSE AN OPTIMAL PLACE FOR  
INSTALLATION

**WARNING!** Maximum distance from the power outlet is 1,5 m



maks. 1,5m

SIDE SHIFT

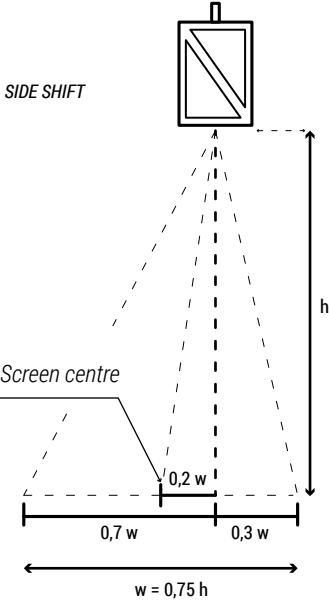


**h = d**

**WARNING!**  
Height, at which the unit is  
installed (h) is equal to the width of  
the picture displayed (d)


min. 0,7m

d


**4) MARK WHERE THE HANGER SHOULD BE INSTALLED**

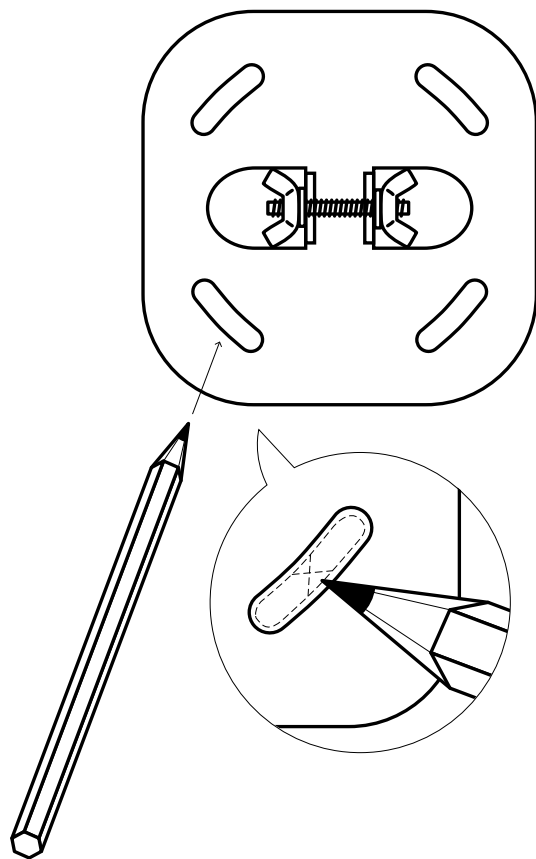


**5) DRILL HOLES**

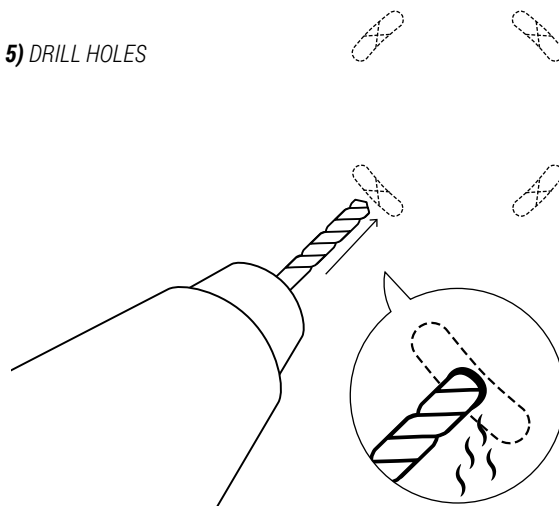


**6) PUT THE RAWLPLUGS IN HOLES**

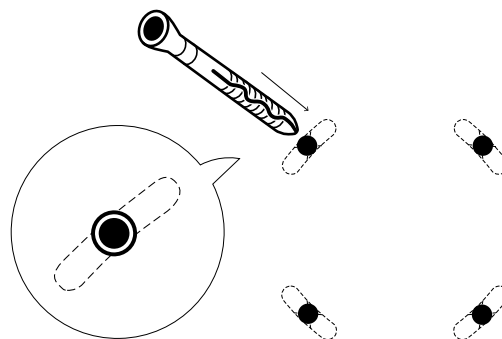


7) INSTALL THE HANGER

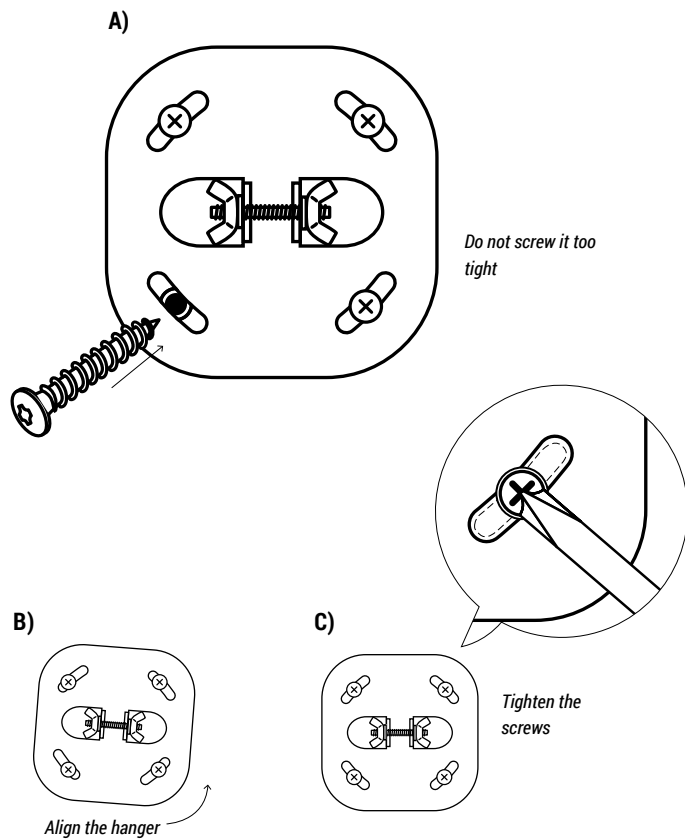


8) PUT THE DEVICE ON THE HANGER, TIGHTEN THE WING NUTS

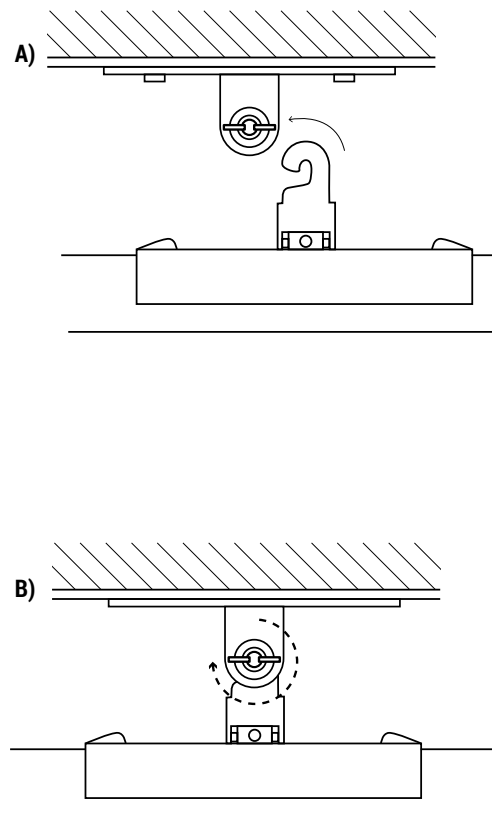


**9) CONNECT THE POWER CABLE**

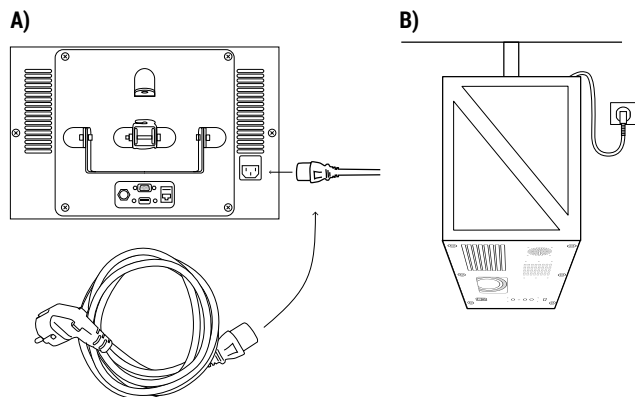


**11) TURN THE DEVICE ON (OFF/ON SWITCH)**

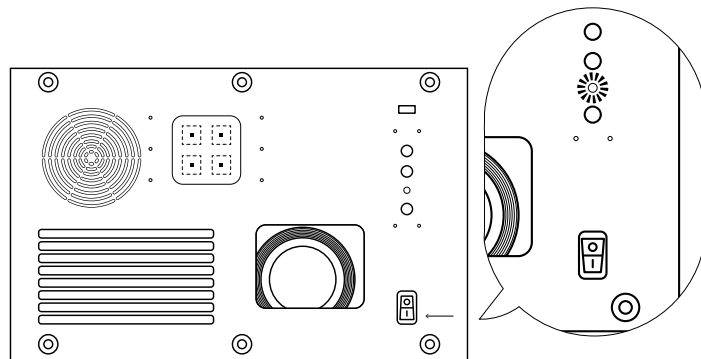

**10) PLUG IN THE NETWORK ADAPTER AND CONFIGURE IN THE MENU**

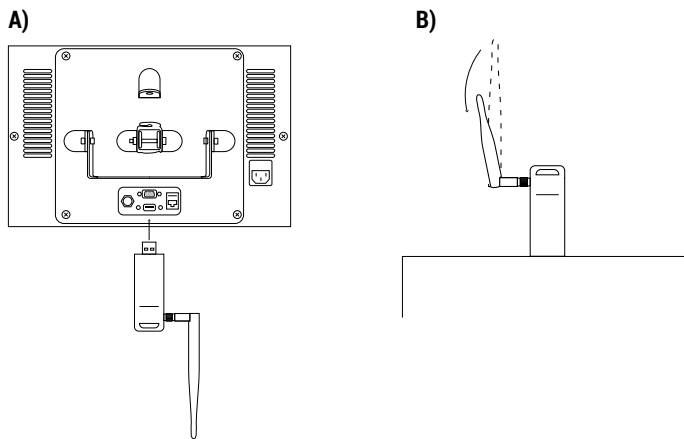

**12) PUT THE BATTERIES IN THE REMOTE AND TURN ON THE FUNTRONIC FLOOR**

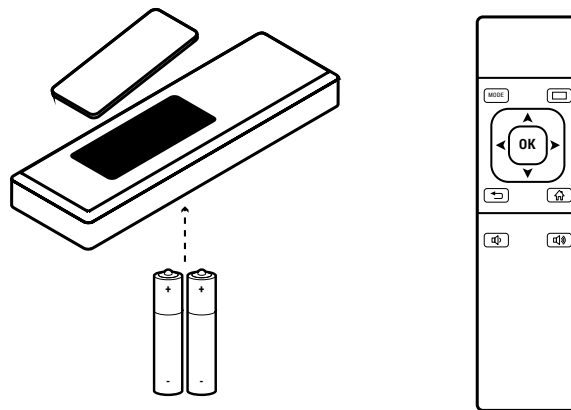

# funtronic

*CONTACTANOS*

Avda. Atlántida 126 Vigo, PO 36208 | 986 246 333 - 699 393 533 | [info@funtronic.es](mailto:info@funtronic.es)

**WWW.FUNTRONIC.ES**